 


ASSEMBLY INSTRUCTIONS

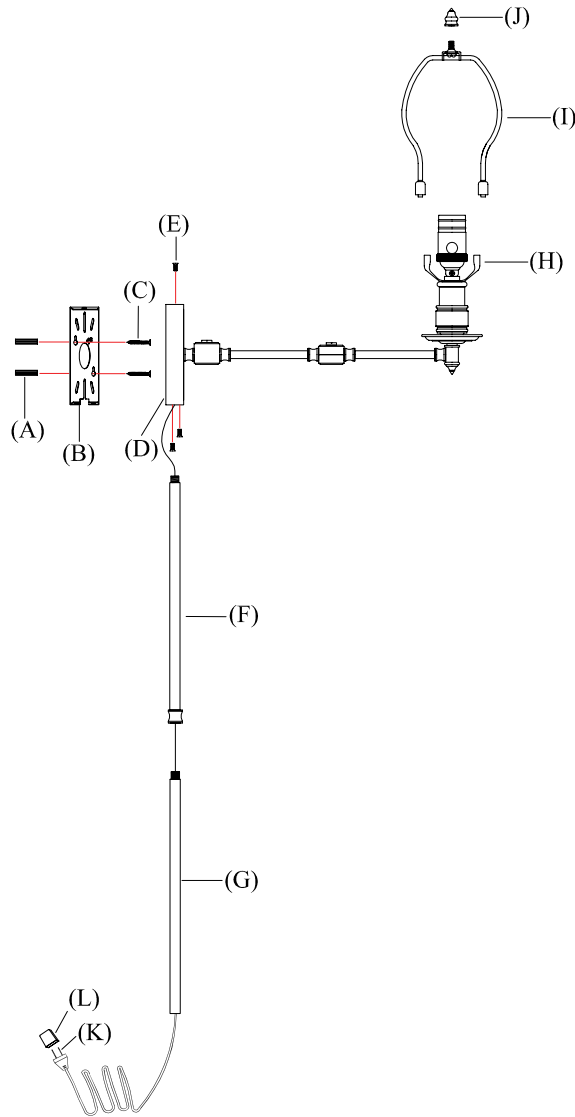

Gene Swing Arm

Item # AH2012

WE RECOMMEND INSTALLATION OF THIS LIGHTING FIXTURE BE DONE BY A LICENSED ELECTRICIAN.

WARNING * SWITCH OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER BEFORE INSTALLATION.**

INSPECT ITEM CAREFULLY BEFORE ATTEMPTING TO INSTALL. IF THERE IS ANY DAMAGE OR OBVIOUS DEFECT, DO NOT INSTALL.

ITEM MAY NOT BE RETURNED ONCE IT HAS BEEN INSTALLED.

1. Remove back plate (B) from the fixture base (D) by unscrewing base screws (E) in counter-clockwise direction.
2. Hold back plate (B) at desired location on wall. Mark center points for two hang holes with a pencil. Remove back plate (B).
3. Drill small holes on each point location on the wall, each hole should be large enough to accommodate the plastic anchors (A). Push plastic anchors into the holes in the wall.
4. Affix back plate (B) to wall by aligning holes in back plate (B) with plastic anchors (A). Install screws (C) into plastic anchors to secure back plate to wall.
5. Attach fixture base (D) to affixed back plate by tightening base screws (E).
6. Remove plastic bushing inside of threaded hole at bottom of fixture base (D).
7. Attach cord cover (F) to bottom of fixture base (D) by turning (F) in counterclockwise direction.
8. Attach cord cover (G) to bottom of (F) by turning (G) in counter-clockwise direction.
9. Insert harp (I) into harp saddle (H) by squeezing both sides of the harp.
10. Remove finial (J) from harp (I). Place lamp shade (not included) over the bolt attached on top of harp (I), screw finial (J) onto the bolt to secure lamp shade to the harp.
11. Insert light bulb into socket.
12. Remove protective plastic (L) from electrical plug (K).
13. Plug lamp into wall outlet box.



VISUAL COMFORT & Co. Est. 1987