

## ASSEMBLY INSTRUCTIONS

### Crown Large Flush Mount


Item # CHC4203

**WE RECOMMEND INSTALLATION OF THIS LIGHTING FIXTURE BE DONE BY A LICENSED ELECTRICIAN.**

**WARNING \*\*\* SWITCH OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER BEFORE INSTALLATION.**

**INSPECT ITEM CAREFULLY BEFORE ATTEMPTING TO INSTALL. IF THERE IS ANY DAMAGE OR OBVIOUS DEFECT, DO NOT INSTALL.**

**ITEM MAY NOT BE RETURNED ONCE IT HAS BEEN INSTALLED.**

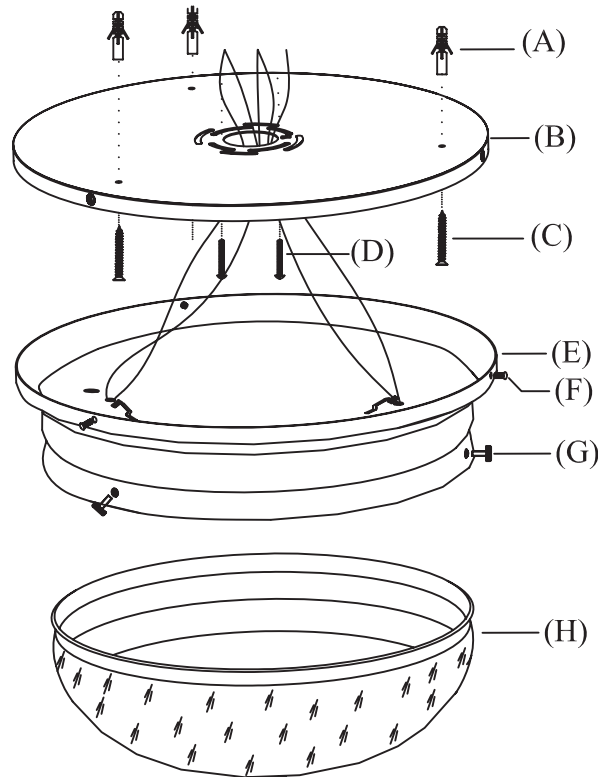

1. Remove back plate (B) from fixture base (E) by unscrewing base screws (F) and set aside.
2. Place back plate (B) to ceiling outlet box, use it as a template and mark center point locations for three holes of back plate (B). Remove back plate (B).
3. Drill small holes on the marked locations, the holes should be big enough to accommodate with plastic anchors (A). Push plastic anchors (A) into the holes.
4. Connect ground wire from the light future (bare copper) to ground wire from ceiling outlet box (usually green or copper in color). Fasten together with a plastic wire connector provided and tightly wrap the wire connector with electrical tape so the end of the connector is sealed. IT IS IMPERATIVE THAT THE OUTLET BOX IN YOUR HOME BE PROPERLY GROUNDED.
5. Connect both hot wires from the fixture (BLACK) to the hot junction box wire from ceiling outlet box (usually BLACK). Fasten together with a plastic wire connector provided and tighten wrap wire connector with electrical tape.
6. Repeat this procedure for the WHITE neutral wires from the light future to the wire from ceiling outlet box (usually WHITE). DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OTHERWISE SAFETY WILL BE COMPROMISED.
7. Attach back plate (B) to ceiling outlet box by aligning the holes and secure with mounting screws (D) and screws (C) provided. Attach fixture base (E) to back plate (B) and secure with base screws (F) provided.
8. Insert light bulbs (not included) into sockets.
9. Loosen thumbscrews (G), insert glass shade (H) to fixture base (E) and tighten with thumbscrews (G). DO NOT OVERTIGHTEN, OTHERWISE IT WILL CAUSE GLASS TO BE BROKEN



VISUAL COMFORT & Co. Est. 1987