
RL11094

ASSEMBLY & INSTALLATION GUIDE

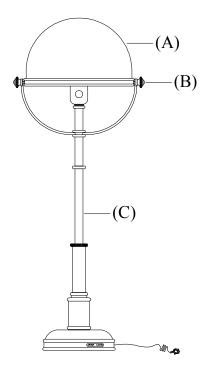

INSPECT ITEM CAREFULLY BEFORE ATTEMPTING TO INSTALL. IF THERE IS ANY DAMAGE OR OBVIOUS DEFECT, DO NOT INSTALL.

ITEM MAY NOT BE RETURNED ONCE IT HAS BEEN INSTALLED.

- 1. Insert light bulb into lamp holder.
- 2. Plug lamp into electrical outlet.
- 3. TO ADJUST LAMP HEIGHT:
 - 1- Adjust lamp by pulling or pushing pole (C) up or down to desired height.
- 4. TO ADJUST LAMP SHADE:
 - 1- Loosen the adjustment keys (B) on both side of shade (A).
 - 2- Swing lamp shade (A) to desired position.
 - 3- Tighten the adjustment key (B).
- 5. CAUTION:

If the external cable is damaged, it must be replaced by the manufacturer or its service agent or similar qualified person in order to avoid a hazard.

6. DISPOSAL:

Do not dispose of electrical appliances as unsorted municipal waste, use separate collection facilities. Contact your local government for information regarding the collection systems available. If electrical appliance are disposed of in landfills or dumps, hazardous substances can leak into groundwater and get into the food chain, damaging your health and well-being.

RALPH LAUREN