

INSPECT ITEM CAREFULLY BEFORE ATTEMPTING TO INSTALL. IF THERE IS ANY DAMAGE OR OBVIOUS DEFECT, DO NOT INSTALL.

ITEM MAY NOT BE RETURNED ONCE IT HAS BEEN INSTALLED.

- 1. Loosen knobs on harp (A).
- 2. Remove harp (B) from plastic bag and slide into top of harp.
- 3. Remove finial from harp (B). Place shade over the bolt attached on the top of harp. Screw finial onto the bolt to secure shade to the harp.
- 4. Adjust harp (B), up or down, to get desired height. The socket should not show under the shade when the harp is adjusted correctly.
- 5. Carefully tighten knobs on harp (A).
- 6. Insert light bulb into socket.

RALPH LAUREN