

CHC 4215


ASSEMBLY & INSTALLATION GUIDE

WE RECOMMEND INSTALLATION OF THIS LIGHTING FIXTURE BE DONE BY A LICENSED ELECTRICIAN.

WARNING * SWITCH OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER BEFORE INSTALLATION.**

INSPECT ITEM CAREFULLY BEFORE ATTEMPTING TO INSTALL. IF THERE IS ANY DAMAGE OR OBVIOUS DEFECT, DO NOT INSTALL.

ITEM MAY NOT BE RETURNED ONCE IT HAS BEEN INSTALLED.

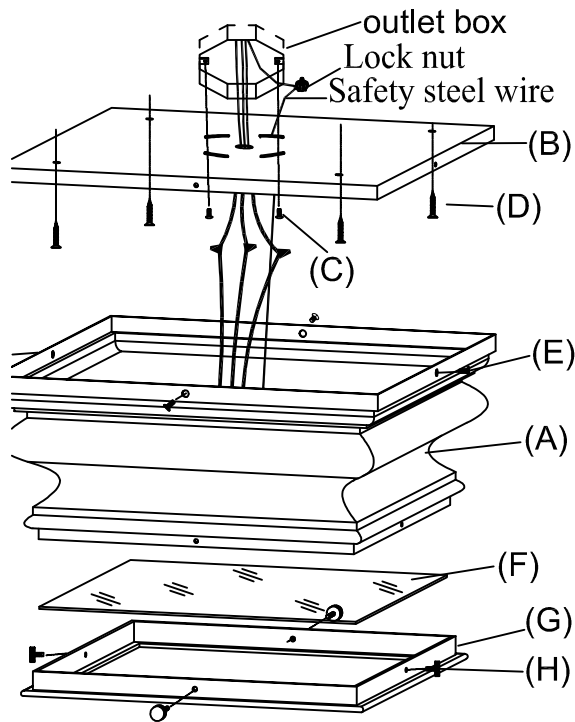

1. Remove back plate (B) from fixture (A), unscrew base screws (E) and set aside.
2. Install safety steel wire to back plate (B) as shown in illustration.
3. Place back plate (B) over ceiling outlet box in desired orientation. Using the back plate as a template, mark the location of the four mounting holes on the ceiling.
4. Remove back plate and install plastic anchors at the marked locations.
5. Connect the hot wires from the fixture (BLACK) to the hot junction box wire from the ceiling outlet box (usually BLACK). Fasten them together with a plastic wire connector provided and wrap connection with electrical tape.
6. Repeat this procedure for the WHITE neutral wires from the light fixture to the wire from the ceiling outlet box (usually WHITE).
7. Connect the ground wire from the light fixture (bare copper) to the ground wire from the ceiling outlet box.
8. Attach back plate (B) to ceiling outlet box and tighten with screws (C) & (D).
9. Replace light fixture (A) to back plate (B), tighten with base screws (E).
10. Insert light bulbs into sockets.
11. Remove bottom cover (G) from light fixture by unscrewing thumbscrews (H) in counter-clockwise directions.
12. Place glass panel (F) into bottom cover (G) and re-place the bottom cover onto light fixture (A), secure with thumbscrews (H).
13. TO CHANGE LIGHT BULB:
Hold bottom cover (G) while loosening thumbscrews (H). Insert light bulbs. Replace bottom cover (G) w/glass panel (F) back and tighten by thumbscrews (H).