Sedona Double Chandelier

TECH LIGHTING°

CHANDELIER

GENERAL PRODUCT INFORMATION:

These fixtures are intended to be installed utilizing NEC compliant junction boxes.

This product is suitable for damp locations.


Dimmable with LED compatible dimmer or triac dimmer.




CAUTION - RISK OF FIRE

This product must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product and the hazards involved.


Use minimum 90°c supply conductors.

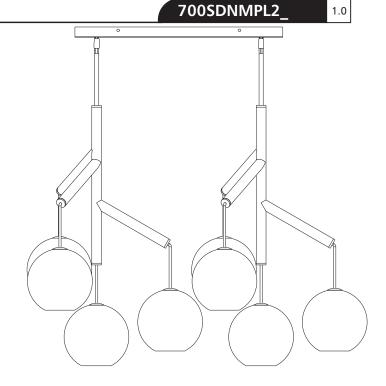


Install the Mounting Plate

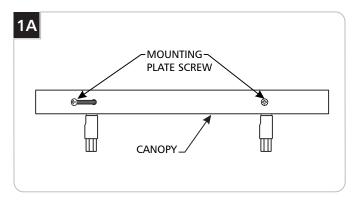

1 Separate the mounting plate from the canopy by removing all four screws.

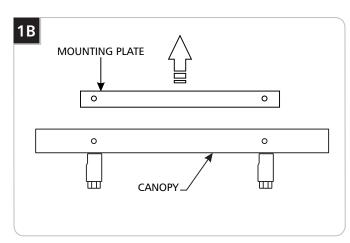


2 Remove the mounting plate from the canopy.

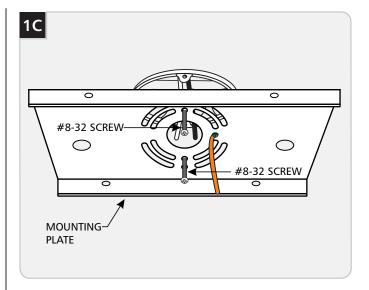


Secure the mounting plate to the electrical box with the two #8-32 screws provided.


Assemble the Fixture

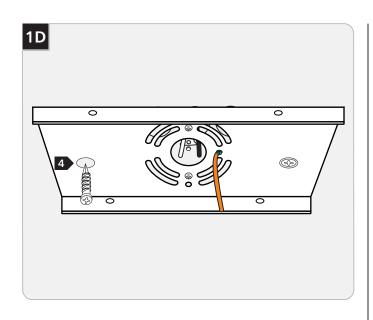

- 4 Line up an anchor with the center of a backplate hole and push the anchor in up to the threads.
- Screw the anchor the rest of the way in with a screwdriver.

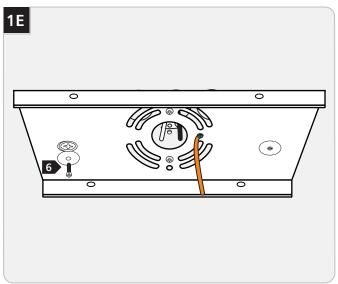


- Secure the backplate to the anchor with a screw and washer.
- **7** Repeat steps 4-6 for the remaining anchor hole.

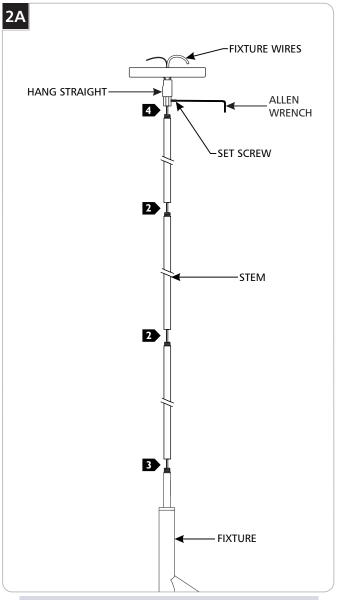


NOTE: Complete the next steps for each section of the chandelier.

- 1 Loosen the set screw on the hang straight using the provided Allen wrench.
- Determine desired length of fixture using the provided stems and assemble them by screwing them together.
- Feed the fixture wires through the stem assembly and screw it to the fixture.
- 4 Feed the fixture wires through the hang straight and screw it onto the stem assembly.
- **5** Re-tighten the set screw on the hang straight.

Install the Fixture

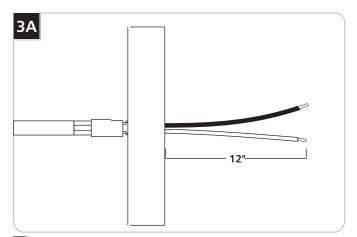


- 1 Leave 12" of the cord behind the canopy for power connections. Cut the excess cord.
- 2 Strip the end of the wires.

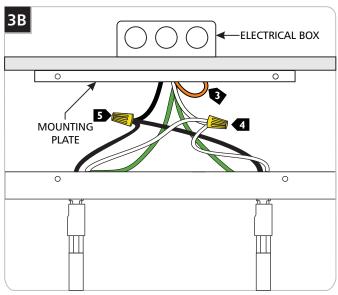


- Connect the ground wire to a suitable ground in accordance with local electrical codes.
- Connect the white wires to the neutral power wire with a wire nut.
- Connect the black wires to the hot power wire with a wire nut.
- Neatly place all wires and wire nut connections in the canopy and reinstall the canopy to the mounting plate (reversal of step 1A).


Install the Pendants

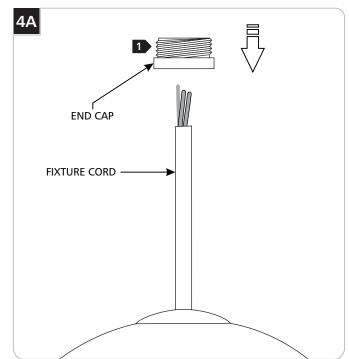

1 Slide the end cap over the fixture cord making sure the threading faces upward.

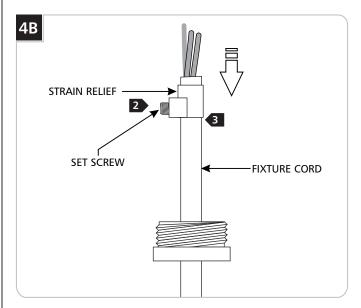


- 2 Loosen (<u>do not remove</u>) the set screw in the strain relief.
- Slide the strain relief over the fixture cord and position it near the end of the cord.
- Tighten the set screw in the strain relief to hold it in place.

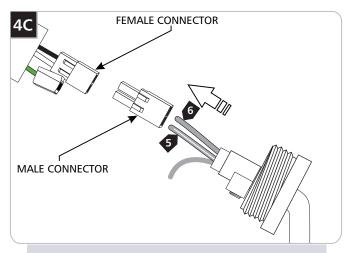


CAUTION: Exposed hot and neutral conductors may result in a short. Ensure no bare wire is exposed.

- Push the neutral wire (white tracer) all the way into the side of the male connector that lines up with the white wire on the female connector.
- Push the hot wire all the way into the other side of the male connector.

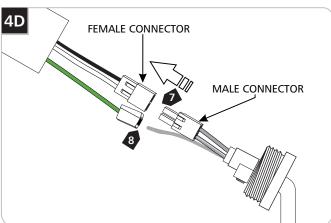


- 7 Connect the male connector by pushing it into the female connector until it locks in place.
- 8 Compress the ground wire connector and insert the bare silver wire, then release the connector.

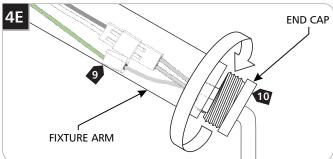

- **9** Gently insert all connections into the fixture arm.
- **10** Screw the end cap on to the fixture arm.

Install the Lamps

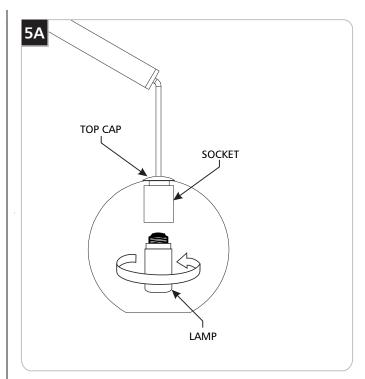

CAUTION: To reduce the risk of a burn or electric shock during re-lamping, disconnect the power to the fixture.

Refer to fixture marking for lamp information.

1 Screw the lamps into the sockets.

Note: If glass hangs crooked, slightly loosen top cap and adjust as needed once the fixture is hung, then re-tighten.

SAVE THESE INSTRUCTIONS!



7400 Linder Ave, Skokie, IL 60077 847.410.4400

www.techlighting.com

© 2017 Tech Lighting, L.L.C. All rights reserved. The "Tech Lighting" graphic is a registered trademark of Tech Lighting, L.L.C. Tech Lighting reserves the right to change specifications for product improvements without notification.

A Generation Brands Company