
## ASSEMBLY INSTRUCTIONS





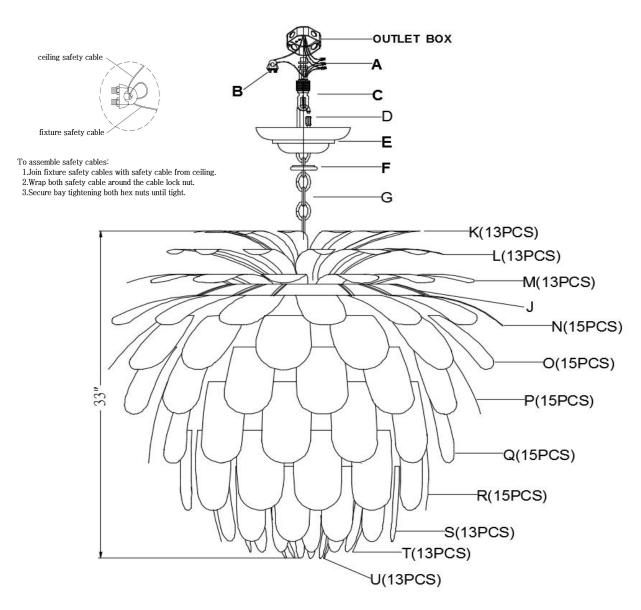

## **Cynara Grande Chandelier**

## Item # CHC 5158

WE RECOMMEND INSTALLATION OF THIS LIGHTING FIXTURE BE DONE BY A LICENSED ELECTRICIAN.

WARNING\*\*\*SWITCH OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER BEFORE INSTALLATION.

INSPECT ITEM CAREFULLY BEFORE ATTEMPTING TO INSTALL. IF THERE IS ANY DAMAGE OR OBVIOUS DEFECT. DO NOT INSTALL.

ITEM MAY NOT BE RETURNED ONCE IT HAS BEEN INSTALLED.

NOTE: CAREFULLY UNPACK EACH PIECE IN TOP LAYER OF PACKING PRIOR TO

REMOVING. RETAIN ALL PACKING MATERIAL UNTIL INSPECTION AND

INSTALLATION ARE FINAL.

- 1. Carefully remove all parts from the box.
- Provide a 1/4" IPS pipe with one end securely mounted to a beam or a structural member. The other end should protrude through the center of the outlet box as shown.
- Assemble the chain mounting loop(C), nipple, nuts and hickey to center 1/4" IPS support pipe and adjust overall length to allow the canopy ring(F) to hold the canopy(E) flush to the ceiling. When the adjustments have been completed, secure the threee(3) nuts as shown.
- 4. Attach the chain(G) to the loop on top of side chains. Slip the canopy ring(F) and canopy(E) over the upper end of the chain. Open the end link(D) of the chain and left the fixture(J) to attach to the chain mounting loop(C) and secure the link(D).
- Lace the fixture wires,ground and safety cable through the chain and loop, exiting through the side of hickey. Run the safety cable through the top of the outlet box and secure to the structural member.
- Connect the fixture ground wire to the ground wire from outlet box (usually green color or copper in color)
  - IT IS IMPERATIVE THAT THIS FIXTURE BE GROUNDED.
- Connect the fixture Neutral wire (ribbed, no markings) twithe the Neural wire (usually WHITE) from the outlet box using wire nuts(A).
- Connect the fixture Hot (smooth edge,markings) wire with the hot wire (usually BLACK) from the outlet Box using wire nuts (A).
- DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.
- 9. Tuck these wire connections neatly into the ceiling outlet box.
- 10. Install canopy(E) to ceiling loop(C) and secure with canopy ring(F).
- 11. Install the bulb(not included) into the sockert.
- Attach each size metal leaf (K,L,M,O,P,Q,R,S,T,U) to the horizonal frame of each layer from top and bottom individually.
- 13. Installation is completed, turn on power at fuse or circuit breaker
- \*\*\*Clean with a dry, soft cloth only. Use no harsh abrasives or chemical agents.

