


ASSEMBLY INSTRUCTIONS

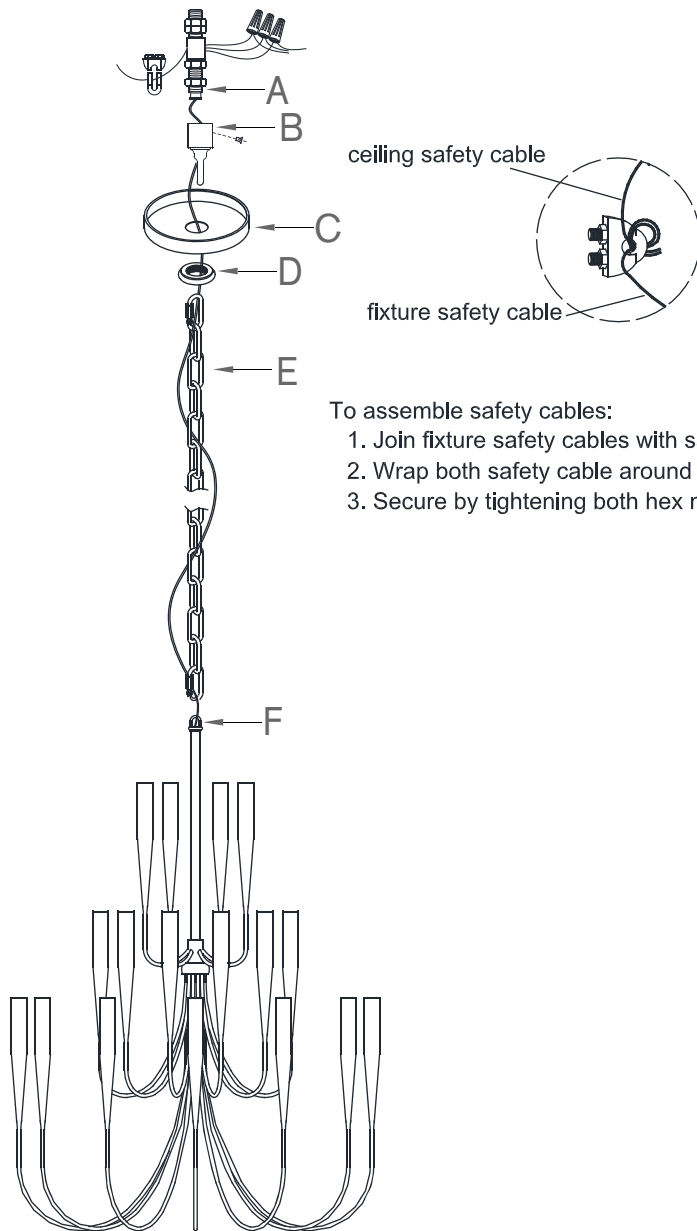

To assemble safety cables:

1. Join fixture safety cables with safety cable from ceiling.
2. Wrap both safety cable around the cable lock nut.
3. Secure by tightening both hex nuts until tight.

Acadia Large Chandelier Item # JN 5072

WE RECOMMEND INSTALLATION OF THIS LIGHTING FIXTURE BE DONE BY A LICENSED ELECTRICIAN.

WARNING * SWITCH OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER BEFORE INSTALLATION.**

INSPECT ITEM CAREFULLY BEFORE ATTEMPTING TO INSTALL. IF THERE IS ANY DAMAGE OR OBVIOUS DEFECT, DO NOT INSTALL.

ITEM MAY NOT BE RETURNED ONCE IT HAS BEEN INSTALLED.

1. Carefully remove all parts from the carton.
2. Provide a 1/4" IPS pipe with one end securely mounted to beam or a structural. The other end should protrude through the enter of the outlet box.
3. Attach chain (E) to top loop (F) by opening / closing end link of chain.
4. Unscrewing the canopy ring (D) from mounting loop (B) and slide canopy ring (D) and canopy (C) on chain (E).
5. Feed wire through chain (E), canopy ring (D), canopy (E), mounting loop (B) and nipple (A).
6. Attach chain (E) to mounting loop (B) by opening / closing end link of chain.
7. Thread nipple (A) into the mounting loop (B) by turning clockwise direction.
8. Insert top threaded nipple (A) in mounting 1/4 IPS pipe.
9. Lace the fixture wires, ground wires and safety cable through the nipple (A), exiting through the side of hickey as show. Run the safety cable through the top of the outlet box and secure to structural member.
10. Attach fixture steel safety cable to structural member in the ceiling.
11. Attach the bare copper ground from the fixture to the ground junction box wire (usually green or copper), fasten together with a plastic wire connector. Tightly wrap the wire connector with electrical tape. Be sure no wire strands are exposed. **IT IS IMPERATIVE THAT THE OUTLET BOX IN YOUR HOME BE PROPERLY GROUNDED.**
12. Connect neutral wire from fixture (ribbed molded wire) to the neutral wire from the junction box (usually white). Fasten both wires together with a plastic wire connector and tightly wrap the wire connctor with electrical tape. Be sure no wire strands are exposed.
13. Connect the hot wires from the fixture (smooth wire) to the hot wire (usually black) from the junction box, fasten both wires together with a plastic wire connector. Tightly wrap the wire connector with electrical tape. **DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OTHERWISE SAFETY WILL BE COMPROMISED.**
14. Tuck the wire connections neatly into the ceiling outlet box.
15. Slip canopy (C) to ceiling and secure with the canopy ring (D).
16. Insert light bulbs (not included) into the sockets.
17. Installation is complete. Restore power and test fixture.

*** Clean with a dry, soft cloth only. Use no harsh abrasives or chemical agents.