


## ASSEMBLY INSTRUCTIONS

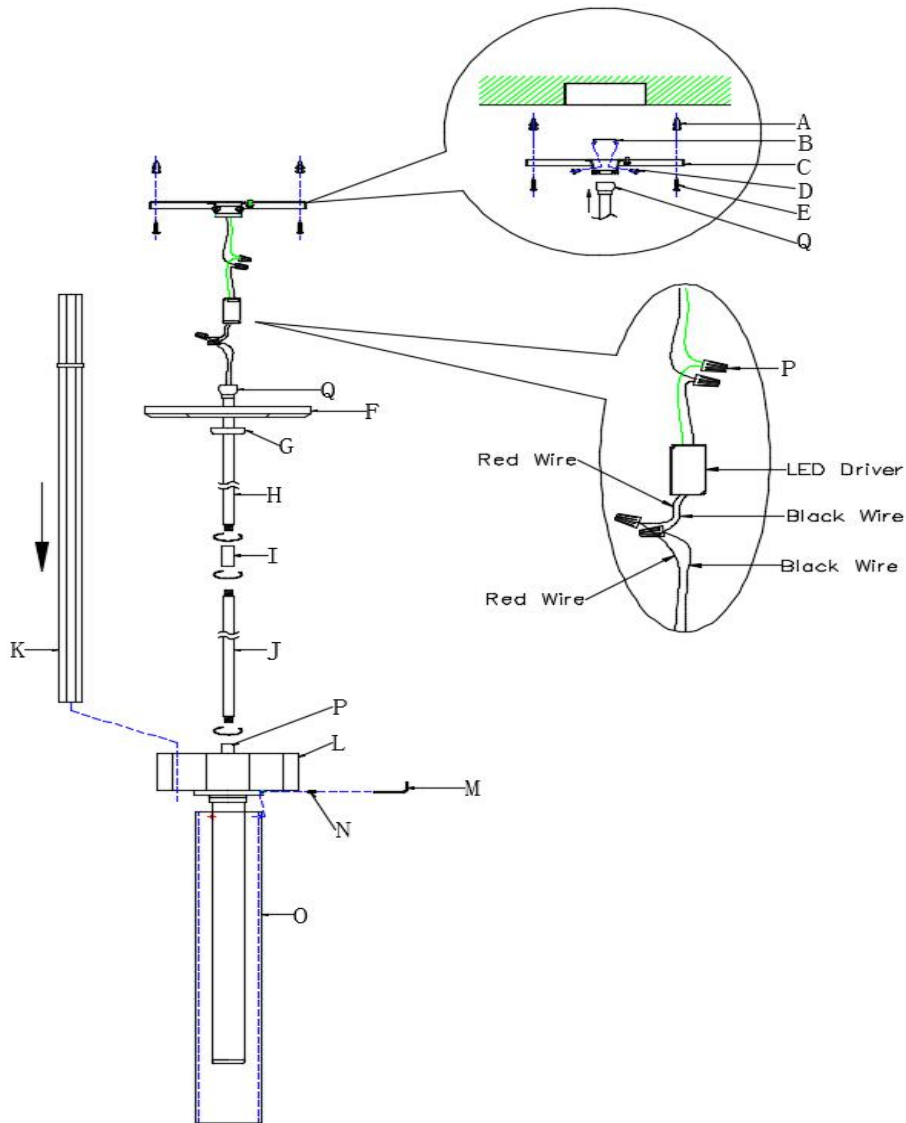

## Fascio Medium Pendant

### Item# LR 5905

WE RECOMMEND INSTALLATION OF THIS LIGHTING FIXTURE BE DONE BY A LICENSED ELECTRICIAN.  
**WARNING\*\*\*SWITCH OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER BEFORE INSTALLATION.**

INSPECT ITEM CAREFULLY BEFORE ATTEMPTING TO INSTALL.  
 IF THERE IS ANY DAMAGE OR OBVIOUS DEFECT. DO NOT INSTALL.  
 ITEM MAY NOT BE RETURNED ONCE IT HAS BEEN INSTALLED.

NOTE: CAREFULLY UNPACK EACH PIECE IN TOP LAYER OF PACKING PRIOR TO REMOVING.  
 RETAIN ALL PACKING MATERIAL UNTILL INSPECTION AND INSTALLATION ARE FINAL.

1. Carefully remove all parts from the box.
2. Remove the mounting plate (C) from the canopy (F) by loosening lock collar(G).
3. Drill 3 holes on the ceiling and make sure the hole distance will match to the mounting plate(C) hole exactly, then knock the anchors(A) to the ceiling holes.
4. Install the mounting plate(C) to the ceiling and secure with mounting screw(E).
5. Feed wire through the rod(J),break(I),rod(H),lock collar(G),canopy(F) and swivel ball(Q).
6. Thread the bottom nipple of rod(J) into connector(P).
7. Thread the top nipple of rod(J) into break(I). Thread the bottom nipp of rod(H) into break(I).
8. Slide the lock collar(G) and canopy(F) through down the rod(H).
9. Measure the wires and cut it to desired length. Be sure to be enough for connection to LED driver input supply wire.
10. Hook the swivel ball(Q) to mounting loop for hanging the light fixture(L) and secure with screw(D)tightly.
11. Connect the LED driver input supply wire Neutral wire(white) with the neutral wire from the outlet box using a wire nut. Connect the LED driver input Hot(black)wire with the hot wire(black) from the outlet box using a wire nut.
12. Connect the LED driver output supply wire to the wires from the fixture body using a wire nut, please note red wire(+) to red wire, and black wire(-) to black wire.  
**DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OTHERWISE SAFETY WILL BE COMPROMISED.**
13. Tuck the wire connections neatly into ceiling outlet box.
14. Slip canopy(F) to mounting plate(C) and secure with lock collar(G).
15. Install the glass tube(O) to the fixture(L) and tight the screw(N) with allen wrench.
16. Insert 10 pcs crystals(K) to the holes of fixture(L).
17. Installation is completed, turn on power at fuse or circuit breaker.

\*\*\* Clean with a dry, soft cloth only. Use no harsh abrasives or chemical agents.

