
ASSEMBLY INSTRUCTIONS

Driver Wiring Diagram (M)

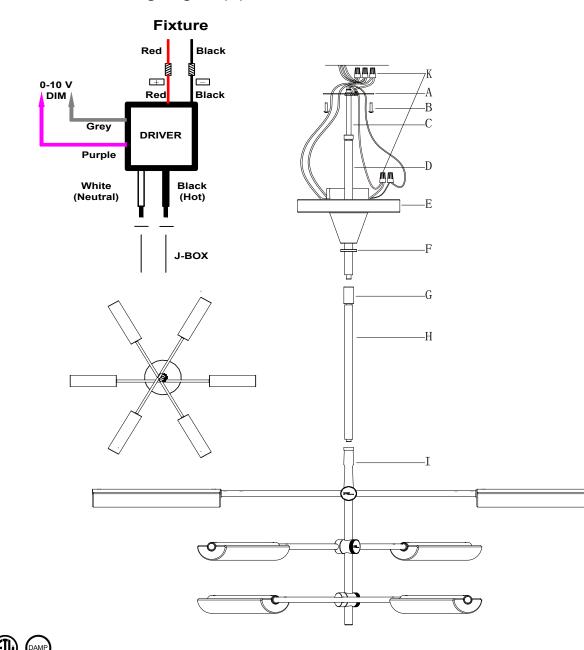

Daley Medium Six Light Chandelier

Item # RL5322 WE RECOMMEND INSTALLATION OF THIS LIGHTING FIXTURE BE DONE BY A LICENSED ELECTRICIAN. WARNING***SWITCH OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER BEFORE INSTALLATION. INSPECT ITEM CAREFULLY BEFORE ATTEMPTING TO INSTALL. IF THERE IS ANY DAMAGE OR OBVIOUS DEFECT. DO NOT INSTALL. ITEM MAY NOT BE RETURNED ONCE IT HAS BEEN INSTALLED. NOTE: CAREFULLY UNPACK EACH PIECE IN TOP LAYER OF PACKING PRIOR TO REMOVING. RETAIN ALL PACKING MATERIAL UNTIL INSPECTION AND INSTALLATION ARE FINAL.

- 1. Carefully remove all parts from the box.
- 2. Feed wire through the inner nipple pipe of rods (D), (H) and nipple(C).
- 3. Thread the bottom rod (H) nipple pipe into light fixture body (I), thread the connector (G) on the top of(H).
- 4. Thread the rod (D) nipple pipe into the connector (G), loose collar ring (F) and put the canopy (E) slide down.
- 5. Thread the thread pipe (C) into the rod (D).
- 6. Assembly the mounting plate (A) onto the nipple (C) and secure sure with nut.
- 7. Put the mounting plate (A) to the ceiling outlet box and secure sure with screws (B).
- Measure the wires and cut it to desired length. Be certain to enough for connecting to LED driver inside of canopy (E).
- Connect the fixture ground (bare) wire with the ground wire from the outlet box using wire nut (K). If your house does not have ground wire, then attach this wire to the green grounding screw inside of the outlet box.
 - IT IS IMPERATIVE THAT THIS FIXTURE BE GROUNDED.
- Connect the driver Neutral wire (white) with the neutral wire from the outlet box using wire nut (K). Connect the driver Hot (black) wire with the hot wire from the outlet box using wire nut (K).
- 11. Connect the driver wires to the wires from the body using wire nut (A). Please note red wire (+) to red wire, and black wire (-) to black wire.

DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.

- 12. For dimmer wiring, please refer to diagram(M).
- 13. Tuck these wire connections neatly into the outlet box.
- 14. Put the canopy (E) to the ceiling and secure with collar ring (F).

***Clean with a dry, soft cloth only. Use no harsh abrasives or chemical agents.

RALPH LAUREN