
ASSEMBLY INSTRUCTIONS

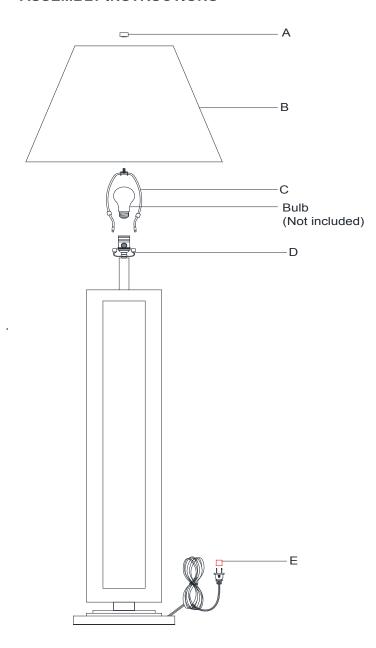







Modern Open Floor Lamp Item # SK 1008

INSPECT ITEM CAREFULLY BEFORE ATTEMPTING TO INSTALL. IF THERE IS ANY DAMAGE OR OBVIOUS DEFECT. DO NOT INSTALL.

ITEM MAY NOT BE RETURNED ONCE IT HAS BEEN INSTALLED.

NOTE: CAREFULLY UNPACK EACH PIECE IN TOP LAYER OF PACKING PRIOR TO REMOVING. RETAIN ALL PACKING MATERIAL UNTIL INSPECTION AND **INSTALLATION ARE FINAL.**

1. Carefully remove all parts from the box.

- 2. Install harp (C) onto the saddle (D).
- 3. Place shade (B) to the harp (C) and secure with finial (A).
- 4. Insert bulb (not included) into the socket.
- 5. Remove protective plug cover (E) from the plug.
- 6. Plug into a proper electrical outlet and test the fixture.
- 7. Installation is complete.

^{***}Clean with a dry, soft cloth only. Use no harsh abrasives or chemical agents.