
ASSEMBLY INSTRUCTIONS







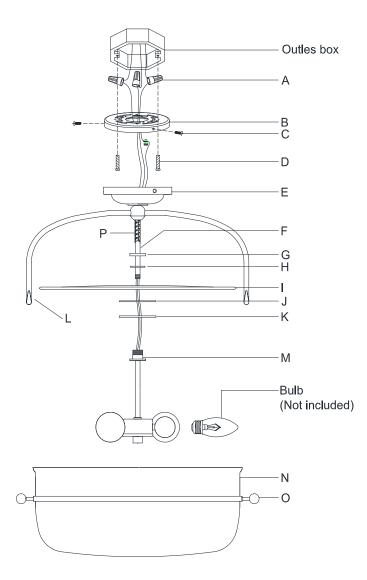

Lorford Medium Semi-Flush Lantern

Item # CHC 4270

WE RECOMMEND INSTALLATION OF THIS LIGHTING FIXTURE BE DONE BY A LICENSED ELECTRICIAN.

WARNING***SWITCH OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER BEFORE INSTALLATION.

INSPECT ITEM CAREFULLY BEFORE ATTEMPTING TO INSTALL. IF THERE IS ANY DAMAGE OR OBVIOUS DEFECT. DO NOT INSTALL.

ITEM MAY NOT BE RETURNED ONCE IT HAS BEEN INSTALLED.

NOTE: CAREFULLY UNPACK EACH PIECE IN TOP LAYER OF PACKING PRIOR TO REMOVING. RETAIN ALL PACKING MATERIAL UNTIL INSPECTION AND INSTALLATION ARE FINAL.

- Carefully remove all parts from the box. Then remove the plastic sleeve (P) from the tube (F) before assembling.
- 2. Let the main wire pass through the metal plate (K), plastic washer (J), glass diffuser (I), plastic washer (H), metal ring (G), tube (F) and canopy (E).
- 3. Attach the metal plate (K), plastic washer (J) to the nipple (M), then attach the glass diffuser (I) on the plastic washer (J) and secure with plastic washer (H), metal ring (G).
- 4. Thread the tube (F) to the nipple (M).
- 5. Remove the mounting plate (B) from the canopy (E) by loosening the side screws (C).
- 6. Affix mounting plate (B) onto the outlet box and secure with mounting screws (D).
- 7. Connect the hot wire (BLACK) from the fixture to the hot wire from the outlet box (usually BLACK). Fasten them together with a plastic wire connector (A) provided and wrap the connection with electrical tape.
- Connect the neutral wire (WHITE) from the fixture to the wire from the outlet box (usually WHITE).
 - DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.
- Connect ground wire from the fixture (bare copper) to ground wire from the outlet box (usually green or copper in color).
- IT IS IMPERATIVE THAT THIS FIXTURE BE GROUNDED.
- 10. Attach canopy (E) onto the mounting plate (B) and secure with side screws (C).
- 11. Insert bulbs (not included) into the sockets.
- 12. Put glass shade (N) into the metal ring (O), then hang the metal ring onto the hook (L).
- 13. Installation is complete, turn on power at fuse or circuit breaker.

^{***}Clean with a dry, soft cloth only. Use no harsh abrasives or chemical agents.

