

RL5161


ASSEMBLY & INSTALLATION GUIDE

WE RECOMMEND INSTALLATION OF THIS LIGHTING FIXTURE BE DONE BY A LICENSED ELECTRICIAN.

WARNING * SWITCH OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER BEFORE INSTALLATION.**

INSPECT ITEM CAREFULLY BEFORE ATTEMPTING TO INSTALL. IF THERE IS ANY DAMAGE OR OBVIOUS DEFECT, DO NOT INSTALL.

ITEM MAY NOT BE RETURNED ONCE IT HAS BEEN INSTALLED.

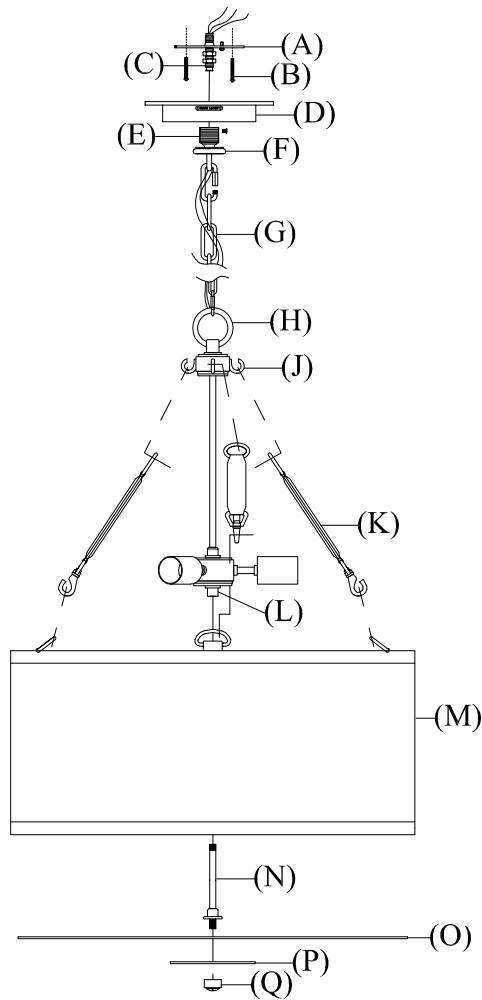

1. Attach chain (G) to top loop (H) and mounting loop (E).
2. Hook lamp shade (M) to assembly part (K.), and hook the assembly part (K) to the hook rack (J) and feed the wire through chain (G), mounting loop (E) and nipple (C).
3. Unscrew canopy ring (F), slide canopy ring (F) and canopy (D) on chain (G).
4. Attach rod (N) to the assembly part (L) and tighten with hand.
5. Join parts (N), (O) & (P) together, letting threaded rod on bottom of pole (N) pass through the center hole of (O) & (P), and tighten with screw (Q).
6. Attach mounting strap (A) to ceiling outlet box using mounting screws (B) provided.
7. Insert threaded nipple (C) in mounting strap (A). Using pliers, thread one of hex nut to nipple (C) to secure.
8. Attach mounting loop (E) to nipple (C) and lock into place using nut included.
9. To determine the hanging length, shorten the height by removing the excess chain link.
10. Attach the ground wire (golden or brass in color) from the fixture to the ground junction box wire (usually green or copper wire). Fasten together with a plastic wire connector and wrap the connection with electrical tape. Be sure no wire strands are exposed. It is imperative that the outlet box in your home be properly grounded.
11. Connect the neutral wire from the fixture (ridges molded wire) to the neutral wire from the junction box (usually white). Fasten together with a plastic wire connector and wrap the connection with electrical tape. Be sure no wire strands are exposed.
12. Connect the hot wire from the fixture (smooth wire) to the hot wire (usually black) from the junction box. Fasten each a plastic wire connector and wrap the connection with electrical tape. Be sure that no wire strands are exposed. **DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OTHERWISE SAFETY WILL BE COMPROMISED.**
13. Tuck wire connections neatly into ceiling outlet box.
14. Slip canopy (D) to ceiling and secure with threaded canopy ring (F).
15. Insert light bulbs into sockets.

R A L P H L A U R E N