


ASSEMBLY INSTRUCTIONS

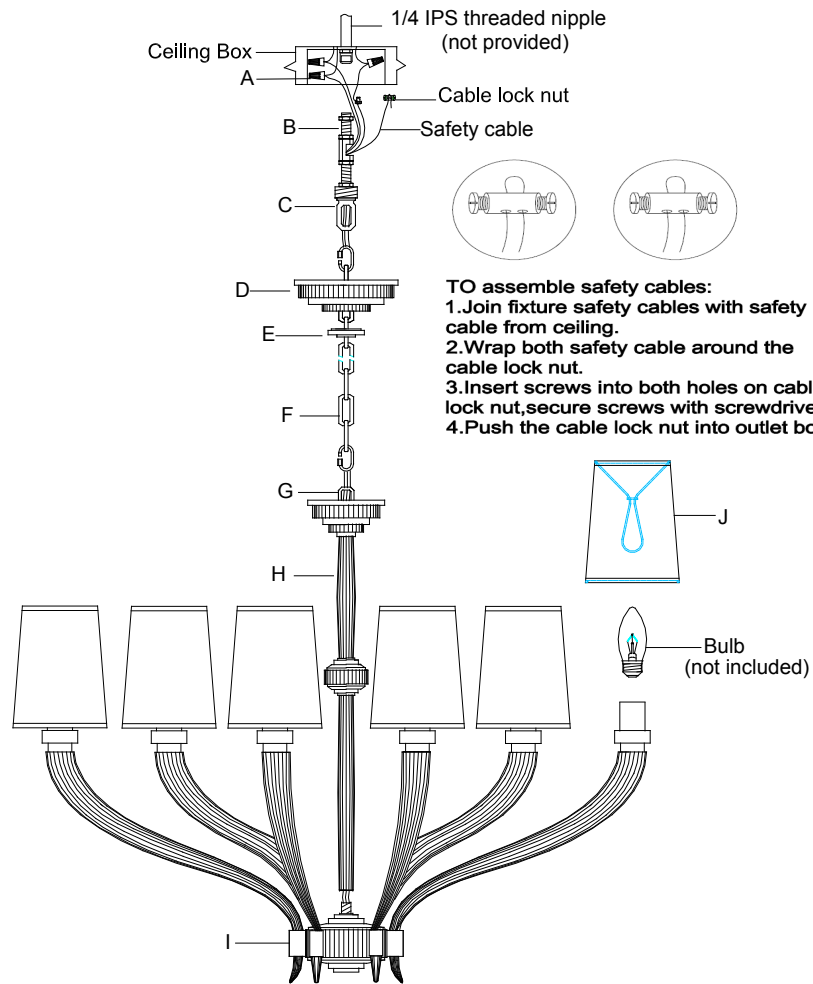

Ruhlmann Large Chandelier

Item # CHC2462

WE RECOMMEND INSTALLATION OF THIS LIGHTING FIXTURE BE DONE BY A LICENSED ELECTRICIAN.

WARNING * SWITCH OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER BEFORE INSTALLATION.**


INSPECT ITEM CAREFULLY BEFORE ATTEMPTING TO INSTALL. IF THERE IS ANY DAMAGE OR OBVIOUS DEFECT, DO NOT INSTALL.

ITEM MAY NOT BE RETURNED ONCE IT HAS BEEN INSTALLED.

1. Carefully thread center rod(H) clockwise into fixture body (I).
2. Install the threaded nipple(B) with hickey and nut into the ceiling box. You must provide a 1/4 IPS threaded nipple which will go through the top of ceiling box and through a structural member of building.
3. Attach ceiling loop(C) to the threaded nipple(B).
4. Determine the desired hanging length of pendant. Adjust chain length by using a pair of chain pliers. Take into consideration that you will use the chain end links to mount the chandelier once you have cut the chain(F). Note: use a soft cloth between the pliers and chain to prevent damage to chain finish.
5. Slip canopy(D) onto chain(F), then thread lock collar(E) to ceiling loop(C) to secure the canopy(D).
6. Carefully raise the fixture assembly, then attach loop(G) to chain end link. Close the threaded collar to secure the chain.
7. Weave the power supply cord, ground wire and safety cable through the chain (F). When you have reached the canopy(D), measure the wire and cut. Be certain to leave enough to connect inside the canopy(D).
8. Strip the insulation on the two power supply wires about 5/8".
9. Unscrew lock collar(E) and slip the canopy(D) down.
10. Twist the power supply cord, ground wires and safety cable together and push through the hole on ceiling loop(C).
11. Install the safety cable into cable lock nut as shown in the diagram.



ASSEMBLY INSTRUCTIONS

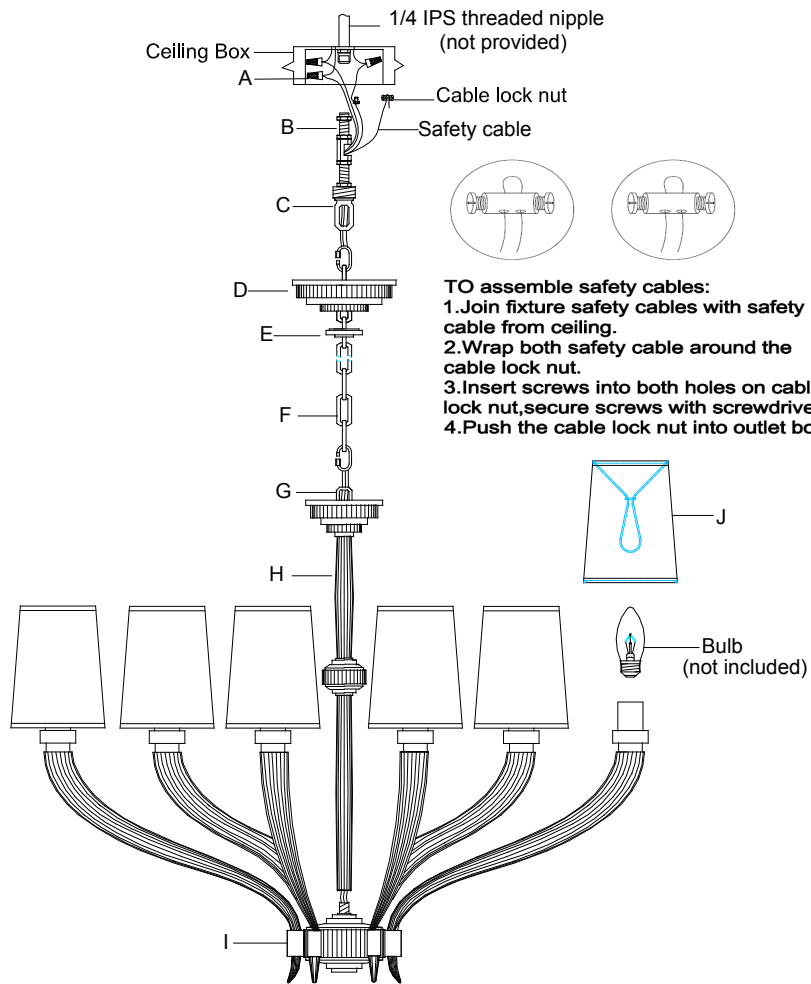

Ruhlmann Large Chandelier

Item # CHC2462

WE RECOMMEND INSTALLATION OF THIS LIGHTING FIXTURE BE DONE BY A LICENSED ELECTRICIAN.

WARNING * SWITCH OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER BEFORE INSTALLATION.**

INSPECT ITEM CAREFULLY BEFORE ATTEMPTING TO INSTALL. IF THERE IS ANY DAMAGE OR OBVIOUS DEFECT, DO NOT INSTALL.

ITEM MAY NOT BE RETURNED ONCE IT HAS BEEN INSTALLED.

12. Connect the Ground (bare) fixture wire with the ground (usually bare) wire from your ceiling box using wire nut(A). If your house does not have ground wire, then attach this wire to the green grounding screw inside the ceiling box. IT IS IMPERATIVE THAT THIS FIXTURE BE GROUNDED.
13. Connect the Neutral (ribbed edge, no markings, or white) fixture wire with the Neutral (usually white) wire from your ceiling box using wire nut(A).
14. Connect the Hot (smooth edge, markings, or black) fixture wire with the Hot (usually black) wire from your outlet box using wire nut(A).
15. Tuck these wire connections neatly into the ceiling box.
16. Raise the canopy(D) and thread lock collar(E) to secure.
17. Install the light bulbs(not included) into sockets.
18. Clip shades(J) on bulbs.
19. Your installation is now complete. Return power to the outlet box and enjoy.

