
ASSEMBLY INSTRUCTIONS



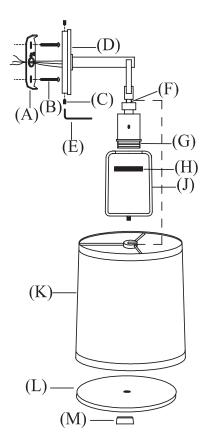

French Cuff Sconce

Item # BBI 2035

WE RECOMMEND INSTALLATION OF THIS LIGHTING FIXTURE BE DONE BY A LICENSED ELECTRICIAN.

WARNING *** SWITCH OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER BEFORE INSTALLATION.

INSPECT ITEM CAREFULLY BEFORE ATTEMPTING TO INSTALL. IF THERE IS ANY DAMAGE OR OBVIOUS DEFECT, DO NOT INSTALL.

ITEM MAY NOT BE RETURNED ONCE IT HAS BEEN INSTALLED.

- Attach ground (green) wire to ground wire from wall outlet box (usually green
 or copper in color), fasten together with a plastic wire connector. Tightly wrap
 the wire connector with electrical tape so the end of the connector is sealed.
 IT IS IMPERATIVE THAT THE OUTLET BOX IN YOUR HOME BE
 PROPERLY GROUNDED.
- Connect neutral (white) fixture wire coming from fixture base to neutral (usually white) outlet wire. Fasten both wires together with a plastic wire connector and tightly wrap the wire connector with electrical tape.
- Repeat the procedure with the hot (black) wires. Always make sure that no
 wire strands are left outside the connectors.
 DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY
 WILL BE COMPROMISED.
- 4. Remove mounting plate (A) from fixture base (D) by removing base screws (C) use Allen wrench (E) provided.
- 5. Affix mounting plate (A) to wall outlet box with mounting screws (B) provided.
- 6. Attach fixture base (D) to mounting plate (A) and tighten by replace base screws (C).
- 7. Remove threaded ring (H) from top of socket housing (G).
- 8. Fit shade (K) on rod (F).
- Attach bottom ring of harp (J) over top of socket housing (G) and secure with threaded ring (H).
- 10. Install bulb of correct type and wattage. See label on lamp.
- 11. Remove finial (M) from harp (J). Place diffuser (L) over the bolt attached on top of harp (J). Screw finial (M) onto bolt to secure (L) to the harp.

